

ASSEMBLY INSTRUCTIONS

Illuminated Screen

1. Carefully remove all screen parts from the box.
2. Lay on floor screen base (A) and feet (B).
3. Attach feet (B) to screen base (A) and secure with 2 screws (C) for each foot, using allen key (D).
4. Stand screen on level surface.
5. Push button of switch (E) to turn on light.

Utility patent pending; application number 11/389473



IMPORTANT SAFETY INSTRUCTIONS


This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

INSTRUCCIONES DE ENSAMBLE

Illuminated Screen

1. Cuidadosamente remueva de la caja todas las partes de la lampara.
2. Ponga en el piso base (A) y pies (B).
3. Atornille los pies (B) a la base (A) con dos tornillos (C) para cada pie, usando la llave allen incluida (D).
4. Pone el screen en superficie plana.
5. Presione el apagador (E) para prender la luz.

Utilidad patentada, numero de aplicacion 11/389473

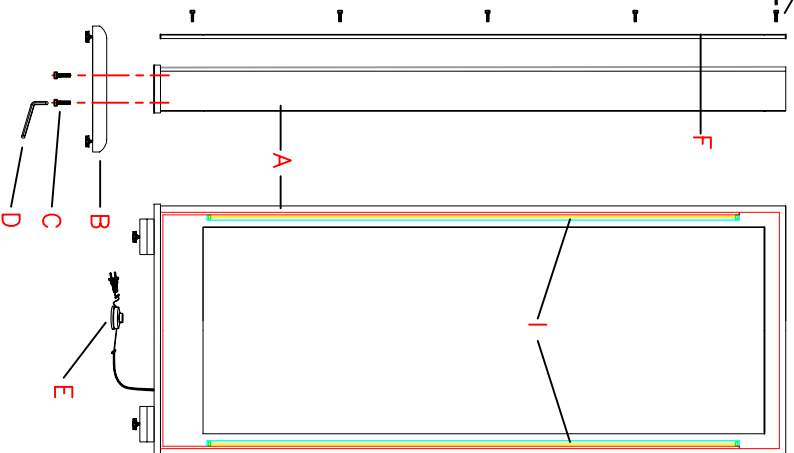


REPLACE BULBS

1. Open back panel (F) by unscrewing all 11 screws (G) using allen key (H) provided.
2. Remove 2 bulbs (I) and replace new bulbs - TURN THE SWITCH (E) ON AND OFF TO MAKE SURE BULBS ARE CORRECTLY INSTALLED AND WORKING.
3. Replace back panel (F) to screen base (A) and secure by screwing in all 11 screws back.

REPLACE DE FOCOS

1. Abra el panel trasero (D) usando los 11 tornillos (E).
2. Quite 2 focos (F) y remplace con focos nuevos - PRENDA Y APAGUE USANDO EL SWITCH DE PIE (G) PARA ASEGURAR QUE ESTE PROPIAMENTE INSTALADO.
3. Poner el panel trasero (D) al screen (A) usando los 11 tornillos (E).

SCREEN FABRIC REPLACEMENT

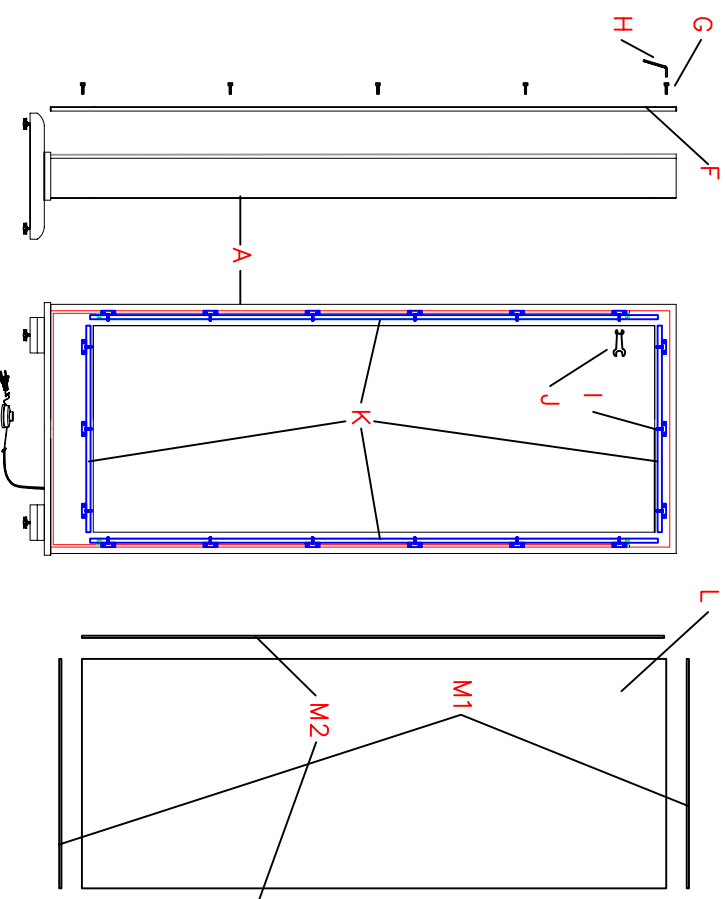

REPLACE SCREEN FABRIC

1. Open back panel (F) by unscrewing all 11 screws (G) using allen key (H) provided.
2. On the wood frame of the screen base (A), unscrew all screws (I) using tool (J), remove all four metal plates (K) attached on each side, and remove old screen fabric.
3. Replace with new screen fabric (L) - MAKE SURE ALL RODS (M1) AND (M2) ARE INSERTED ON EACH SIDE OF SCREEN FABRIC BEFORE REPLACING.
4. Replace metal plates (K) to hold screen fabric and secure with screws (I).
5. Repeat steps 2 to 4 for the back panel (F).
6. Replace back panel (F) to screen base (A) and secure by screwing in all 11 screws back.

Utility patent pending; application number 11/389473

REMPLECE TELA DEL SCREEN

1. Abra panel trasero (F) desatornillando todos los 11 tornillos (G) use llave allen (H) provieda.
2. Sobre la base de madera del screen (A), desatornille todos los tornillos (I) usando llave (J), remueva las cuatro placas de metal (K) puestas en cada lado, y quite tela vieja.
3. Remplace con tela nueva (L) - ASEGURESE QUE TODAS LAS BARRILLAS (M1) Y (M2) ESTEN METIDAS EN CADA LADO DE LA TELA DEL SCREEN ANTES DE INSTALARLA.
4. Use placas de metal (K) para detener la tela del screen y asegure con tornillos (I).
5. Repita pasos del 2 al 4 para panel trasero (F).
6. Ponga el panel trasero (F) de nuevo a la base del screen (A) y asegure atornillando los 11 tornillos.

Utilidad patentada, numero de aplicacion 11/389473

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Esta lampara tiene un enchufe polarizado (una navaja es mas ancha que la otra) como forma de seguridad para reducir el riesgo de un shock electrico. Este enchufe polarizado entrara en una conecion solo de un lado. Si el enchufe no entra en la conecion trate el reverso. Si aun asi no entra, contacte un electricista calificado. Nunca use una extension a menos que el enchufe pueda ser conectado completamente. No altere el enchufe.